



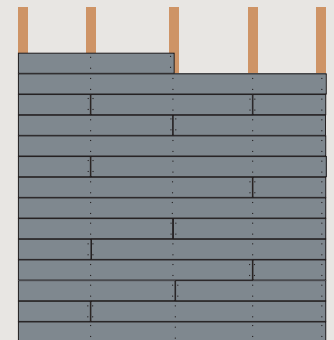


TRANSFORM YOUR ROOM IN A WEEKEND WITH


# SHIPLAP

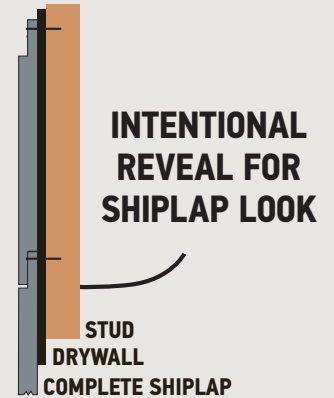

HORIZONTAL INSTALL

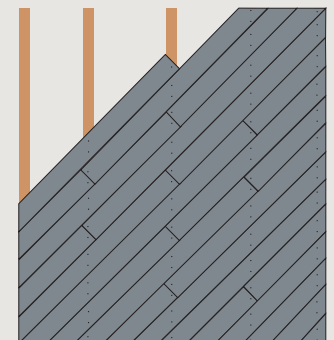

DIAGONAL INSTALL

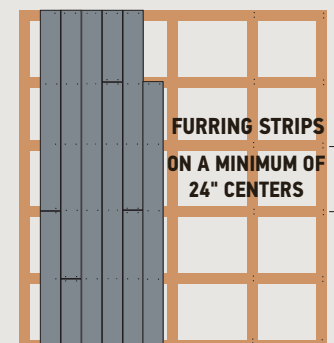

VERTICAL INSTALL

## Basic Installation Instructions:

- 1. LOCATE AND MARK STUDS ON WALLS USING A STUD FINDER.** Mark vertical lines following the studs up the desired installation walls.
- 2. REMOVE BASEBOARDS FROM WALLS.** (Be careful when removing the old baseboards if you plan on reusing them over the shiplap)
- 3. INSTALL METRIE COMPLETE SHIPLAP.** Place the first board on the wall starting at the floor. Use a LEVEL to position the board so that it is not tilted. Nail the shiplap board through the dado (flat slot that connects boards) to the studs using a NAIL GUN (18 or 23 gauge). Make cuts to the boards where necessary using a COMPOUND MITRE SAW.
- 4. FINISH WITH THE METRIE COMPLETE FINISHING KIT.** Use the color-matched METRIE COMPLETE WAX STICK to fill all nail holes. Use the LEVELING CARD & BUFFING PAD to smooth all areas you filled.
- 5. INSTALL NEW BASEBOARD OR REINSTALL OLD BASEBOARD.** To reinstall old baseboard, cut  $\frac{1}{2}$ " off each end, matching the angle of the existing cut. Use the color-matched METRIE COMPLETE CAULKING (caulking gun required) to fill any gaps. Run a clean finger along the bead of caulking to smooth it out.

### MEASURE



### CUT



### INSTALL



### FINISH

