



TRANSITIONINSTALLATION

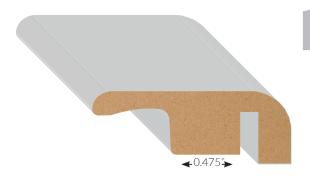

Dimension: 1.375"w x 0.5"h



Install the flooring leaving a 1-1/4" gap between the two floors for the end cap installation.

ECO5 LAMINATE END CAP


Used to fill the gap between the floor and carpet, hearths or against sliding doors.


Used with floors 7-9mm in height.

For concrete use appropriate RAWL PLUGS


Glue with construction adhesive (do not glue floor)

Surface: Wear resistant laminate **Core Material:** Moisture resistant MDF

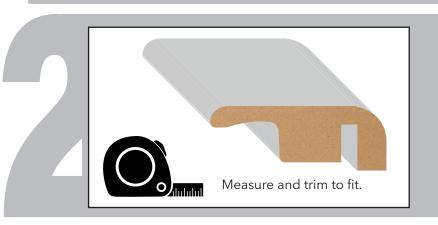



Center the track between the flooring with 1/4" spacing between the track and floor plank and screw to the subfloor using included screws.



Starting at one end, press the molding into the track inching along the length of the molding. *It will NOT snap in all at once.* You may also use a rubber mallet.